


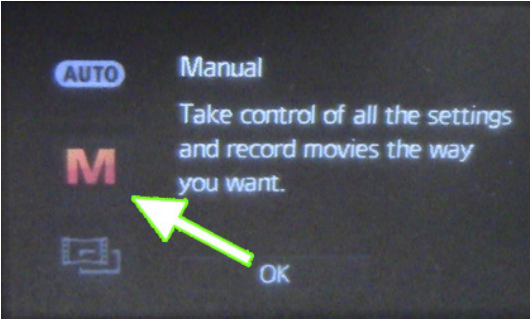


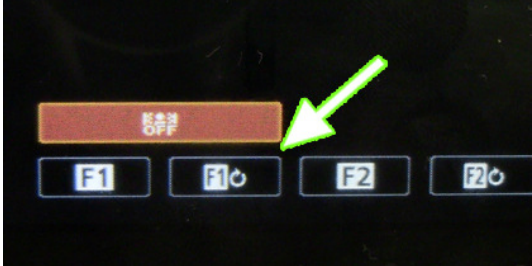





Instructions for Fading with a Canon Vixia Camcorder HF R300

1. Turn on the “POWER” button	
2. Click on the “HOME” Button	
3. Press the “Camera Mode” on the touch screen	
4. Press the “M” for “Manual Mode”, then “OK”	
5. Press the “FUNC”	

<p>6. Scroll down to “Faders” and then press “Faders”</p>	
<p>7. Locate the “F1” button and press it</p>	
<p>8. Notice that now the Fade Trigger is set to Always. Each time you press the “Record Button”, your simple dissolve will activate.</p>	
<p>9. Be sure the cover of the camcorder is open before you record.</p>	
<p>10. Press the record button and it will slowly fade into your shot. Shoot your ENG. Press the record button to fade out. Close the cover of the camcorder and return to class.</p>	

Instructions for Fading with a Canon Vixia Camcorder HF R400

1. Press the “Camera and Cog” image on the touch screen



2. Press the “Faders”



3. Press the “F1” function to activate the dissolve. This must be completed EACH time you turn ON the camcorder.

